

Ecophon Hygiene Meditec™ E


Ecophon Hygiene Meditec™ E has a recessed visible grid and a tegular edge design, suitable for dry areas where disinfection and/or cleaning is required on a regular basis. The surface is resistant to mould and bacteria growth and to common detergents and disinfectants.



SYSTEM RANGE



Size, mm	600x600	1200x600
T24	•	•
Thickness	15	15
Inst. Diagr.	M256	M256



Hygiene Meditec E tile



Hygiene Meditec E C1 section with Connect Universal clip



Hygiene Meditec E C1 system


Acoustic



Sound Absorption:

Test results according to EN ISO 354. Classification according to EN ISO 11654.

 $lpha_{_{\mathrm{D}^{\prime}}}$ Practical sound absorption coefficient

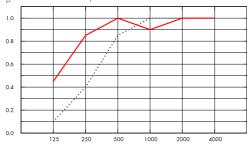

Frequency Hz

- ···· Hygiene Meditec E 15 mm, 60 mm o.d.s.
- Hygiene Meditec E 15 mm, 200 mm o.d.s.
 o.d.s = overall depth of system

THK	o.d.s. mm		$lpha_{p'}$ Pr	actical soun	d absorption c	coefficient		$\alpha_{_{ m W}}$	Sound absorption class	
mm O.C	0.u.s. IIIIII	125 Hz	250 Hz	500 Hz	1000 Hz	2000 Hz	4000 Hz	_w	Souria absorption class	
15	60	0.10	0.40	0.85	1.00	1.00	1.00	0.70	С	
15	200	0.45	0.85	1.00	0.90	1.00	1.00	1.00	А	

THK mm	o.d.s. mm	NRC	SAA
15	60	0.90	0.87
15	400	0.85	0.89

Indoor Air Quality



Certificate / Label	
Eurofins Indoor Air Comfort®	IAC Gold
French VOC	A+
Finnish M1	•









Cradle to Cradle Certified®



This product is Cradle to Cradle Certified® at Bronze level (version 4.0).



Material Health

This product has received a C2C Certified Material Health CertificateTM at the Silver level (standard version 4.0). The C2C Certified Material Health CertificateTM is a verification of the health and safety of a product's composition using the Material Health requirements of the Cradle-to-Cradle Certified Product Standard.



Carbon footprint

	kg CO2 equiv/m²	Life-cycle stages A1 to C4 from EPD, in conformity with ISO 14025 / EN 15804
Hygiene Meditec E	2,37	11020 / 211 10001



Circularity

Minimum post-consumer recycled content	43%
Recyclability	Fully recyclable



Fire safety

Country	Fire standard	Class	The glass wool core of the tiles is tested and classified as non-combustible according to EN ISO 1182.
Europe	EN 13501-1	A2-s1,d0	Horreombushble decording to ETV 150 TT02.



Humidity Resistance

Class C, relative humidity 95% and 30°C, according to EN 13964:2014



Visual appearance

White 500, nearest NCS colour sample S 0500-N, 84% light reflectance.



Cleanability

Daily dusting and vacuum cleaning. Weekly wet wiping.



Advanced Cleanability

Can withstand use of hydrogen peroxide vapour. Occasional steam cleaning (1/year).



Surface Endurance

Product tested according to ISO 11998, and withstand 200 cycles.



Chemical resistance/Disinfection

Chemical	Active Substance	Concentration
Ethanol	Ethanol	70%
Chlorine	Sodium Hypochlorite solution	2,5%
Virkon S	Dipotassium peroxodisulphate; Sulphamidic acid	1%
Isopropanol	Isopropyl Alcohol	<i>7</i> 0%

Tested according to ISO 11998 and withstand the following chemicals or disinfectants.



Mould and Bacterial Resistance

Standard/Method	
ISO 846 :2019 method C (for bacterium)	O (No growth under the microscope)
ASTM D3273-16 (for fungi)	10 (0% growth on the surface)

Clean Room



Standard/Method		Class
ISO 14644	Particle cleanliness class	ISO 4
NF S 90-351	Microbiological class	M1/area 4
NF S 90-351	Particle elimination kinetics	CP(0,5) 5

Accessibility



The tiles are demountable. Minimum demounting depth according to installation diagram. The tiles are secured using Hygiene Clip 20 to allow for effective in-situ cleaning. The clips are easily removable from above the ceiling. A tightly sealed, easy-to-open Hygiene Inspection hatch is available to simplify access to the ceiling void.

Installation

Installed according to installation diagrams, installation guides and drawing aid. Cut panels must be sealed with Connect Edge sealant.

System weight

	kg/m²	Weight information is indicative and subject to variation.
Hygiene Meditec E	1,4	
Hygiene Meditec E + Connect grid system	2,4	•




Mechanical properties

See table about Max live load and Min load bearing capacity and Functional demands, Mechanical properties at www.ecophon.com.



CE


Ecophon ceiling systems are CE marked according to the European harmonized standard EN13964:2014. CE marked construction products are covered by a Declaration of Performance (DOP) which enables customers and users to easily compare performance of products available on the European market.

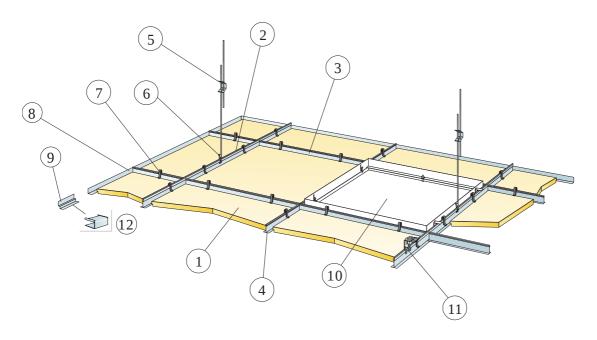


© Saint-Gobain Ecophon AB

QUANTITY SPECIFICATION (EXCL. WASTAGE)


		Size, mm	
		600×600	1200×600
	Hygiene Meditec E	2,8/m²	1,4/m²
	Connect T24 Main Runner, installed at 1200 mm centres (max distance from wall 300 mm)	0,9m/m²	0,9m/m²
	Connect T24 Cross Tee, L=1200 mm, installed at 600 mm centres	1,7m/m²	1,7m/m²
	Connect T24 Cross Tee, L=600 mm	0,9m/m²	-
	Connect Adjustable Hanger, installed at 1200 mm centres (max. distance from wall 600 mm)	0,7/m²	0,7/m²
	Connect Hanger Clip (not to be used in swimming hall environments)	0,7/m²	0,7/m²
	Connect Universal Clip 0083	11/m²	7/m²
	Alt. Connect Angle Trim, fixed c300	as required	as required
	Alt. Connect Shadow-line Trim, fixed c300	as required	as required
)	Connect Inspection Hatch	as required	as required
1	For direct installation: Connect Direct Bracket, installed at 1200 mm centres	0,7/m²	0,7/m²
2	Connect E-plug 0158/0154 (for Connect Shadow-line Trim)	as required	as required
	Δ Min. overall depth of system, with adjustable hanger and clip: 160 mm, with direct fixing wituout clip: 60 mm.	-	-
	δ Min. demounting depth: With clip: 160 mm. Without clip: 110 mm.	-	-
	Will, demodrining depirit. Will clip. 100 limit. Williout clip. 110 limit.		

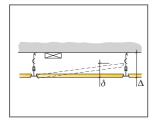

See Quantity Specification



Straight cut and T-profile on top of Connect Shadow-line Trim



Connect E-plug

Max live load (N) 50	Min load bearing capacity [N] 160
50	160
	load (N) 50

Live load/load bearing capacity